

Prism TM2 Wiring Harness

From Back of
Connector

6	5	4
3	2	1

Power Harness

Pin 1	RS232 TX	White
Pin 2	RS232 RX	Yellow
Pin 3	RS232 Ground	Black
Pin 4	Ignition	White
Pin 5	Main Ground	Black
Pin 6	Main 12 VDC (+)	Red

From Back of
Connector

16	15	14	13	12	11	10	9
8	7	6	5	4	3	2	1

I/O CONNECTOR

Pin 1	Mic in (-) (NOT USED)
Pin 2	Input 1 (Active Low)
Pin 3	Ground (NOT USED)
Pin 4	Green LED (NOT USED)
Pin 5	Red LED (NOT USED)
Pin 6	TNav sw (NOT USED)
Pin 7	Input 3 (Active High)
Pin 8	Output 1
Pin 9	Mic in (+) (NOT USED)
Pin 10	Road Side Help (NOT USED)
Pin 11	Mute out (NOT USED)
Pin 12	Speaker (+) (NOT USED)
Pin 13	Speaker (-) (NOT USED)
Pin 14	Ground (NOT USED)
Pin 15	12 VDC (NOT USED)
Pin 16	Output 2